

### USB Low Light Wide Angle Camera Module



2MP Sony IMX291 (SKU:B0201)

**QUICK START GUIDE** 

#### INTRODUCTION

#### • About Arducam

Arducam has been a professional designer and manufacturer of SPI, MIPI, DVP and USB cameras since 2012. We also offer customized turnkey design and manufacturing solution services for customers who want their products to be unique.

#### • About this USB Camera

The B0201 is a new member of the Arducam's USB camera family. It's a 2MP, UVC compliant, wide angle, low light USB 2.0 camera. This USB camera is based on the 1/2.8" Sony IMX291 image sensor, and you can read more specs in the next chapter. Arducam also provides the sample application that demonstrates some of the features of this camera.

#### About UVC

The B0201 is a UVC-compliant camera. The native UVC drivers of Windows, Linux and Mac shall be compatible with this camera so that it does not require extra drivers to be installed.

#### About Customer Service

If you need our help or want to customize other models of USB cameras, feel free to contact us at support@arducam.com

#### **SPECS**

	Camera
Sensor	1/2.8" IMX291
Resolution	2MP 1945H x 1109V
Data Format	MJPG/YUY2/H.264
Frame Rate	H.264 30fps@1920 x 1080; MJPG 30fps@1920 x 1080; YUY2 30fps@640 x 360.
Dynamic Range	80DB
Minimum Illumination	0.001Lux
Lens	
Field of View (FOV)	D= 120°
Lens Mount	M12
Focusing Range	3.3ft (1M) to infinity
IR Sensitivity	Integral IR filter, visible light only
Functionality and Compatibility	
Auto Controlled Features	Saturation, Contrast, Acutance, White balance, Exposure.
Audio	Dual microphones
System Compatibility	Win7/8/10, Linux and Mac with UVC (Android compatibility, contact us for support.)
	Power
Power Supply	DC5V
Working Current	MAX 300mA
Physical	
Operating Temp.	-4°F~167°F (-20°C~+75°C)
Dimension	36x36mm (Mount compatible with 28x28mm)
Cable Length	3.3ft (1M)

#### **OUICK START**

#### • How to download the program

Download the APP Amcap from the following link https://www.arducam.com/downloads/app/AMCap.exe

#### NOTE:

- If used with the Andriod device, USB Camera APP and connect adapter are needed.
- For Mac OS, please open the native software facetime and select the video camera "USB Camera" .

#### How to connect the camera

Connect the one end of the USB 2.0 cable to the USB 2.0 connector provided on the back of B0201, and connect the other end to the USB 2.0 host controller on the computer.

# How to use the program (Windows demo only)

The Menu bar at the top of the shown image contains few menu items and the current preview resolution and the frame rate are displayed on the bottom bar when the application is running. The following sections describe each of the menu items


#### Menu>Devices

This menu will show the available video devices to host PC. The B0201 named "USB Camera". This camera support capturing audio, so the menu shows the "USB 2.0".




#### • Menu>Options

The options menu can be used to select the preview and audio and image parameters supported by this camera.




# How to use the program (Windows demo only)

 Video Capture Filter -> Video Proc Amp/Camera Control

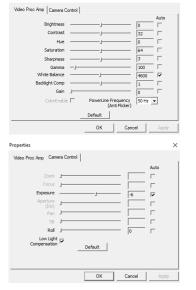

# How to use the program (Windows demo only)

- Video Capture Pin

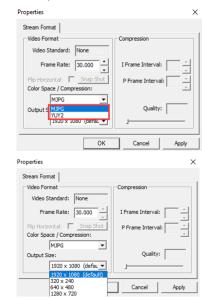

## How to use the program (Windows demo only)

#### Menu> Capture

The capture menu is used to capture the still image and video by using this application. You can also select the related parameters.

NOTE: If you want to get the voice from the microphone, you need to select the option "Capture Audio" before capturing video.

