# Arducam®

# **Datasheet**

OV2311 USB2.0 Low Distortion Camera Module

# **CONTENT**

- 1. Purpose
- 2. Effect
- 3. Technical parameters
- 4. Overall Dimension Diagram
- 5. Lens Diagram
- 6. Imaging
- 7. Camera Parameters Interface
- 8. Function Inspection Criteria
- 9. Visual inspection criteria
- 10. Reliability Test
- 11. Packaging requirements
- 12. Other

Version	Compile	Auditing	Authorize	DATE
V1.0	Bin L	Kai Z	Lee J	06.01.2021

# 1. Purpose

In order to fully describe the technical specifications referred to in technical cooperation, it usually needs to be expressed by a complete set of documents. As part of this, this datasheet specifies the specific technical specifications that a camera module should meet and is binding on this model.

# 2. Efficacity


This datasheet shall prevail if this it's inconsistent with the specifications in the general technical specifications of such goods.

## 3. Technical Parameters


Items	Parameters	
Sensor	Monochrome global shutter OV2311	
Optical Size	1/2.9 inch	
Resolution	2MP 1600H x 1200V	
Data Format	MJPG/YUY2	
Pixel Size	3 μm x 3 μm	
Dynamic Range	68DB	
	FOV: 75°(H)	
_	EFL: 2.8MM	
Lens	Distortion: <1%	
	Mount: M12*P0.5mm	
IR Sensitivity	No IR filter, sensitive to IR	
Frame rate	MJPG: switchable, up to 50fps@1600 x 1200/1280 x 960/720P/800 x 600/640 x 480/320 x 240/160 x 120; YUY2: 5fps@1600 x 1200/720P/800 x 600.	
Auto control	Exposure/ White balance	
Input Voltage	DC 5V	
Working Current	MAX 200mA	
Operating Temp.	-4°F~158°F (-20°C~+70°C)	
Cable Length	Default 1M, optional 2M, 3M, 5M	
System Compatibility	Windows, Linux, Mac, and OS with UVC driver	
Connector No.	ZHR-4	
Dimension	38mmx38mm	
Hole Pitch	Compatible with 34mmx34mm, 28mmx28mm	

Website: <a href="www.arducam.com">www.arducam.com</a> | Email: <a href="mailto:support@arducam.com">support@arducam.com</a> | Emailto: <a href="mailto:support@arducam.com">support@arduc

# 4. Overall Dimension Diagram

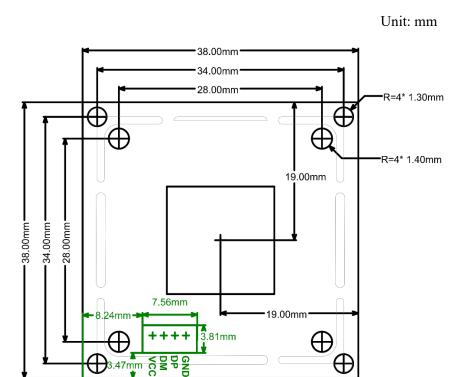


# 5. Lens Diagram

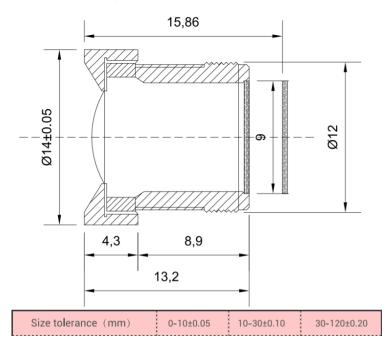


Website: <a href="mailto:www.arducam.com">www.arducam.com</a> | Email: support@arducam.com

# 6. Imaging

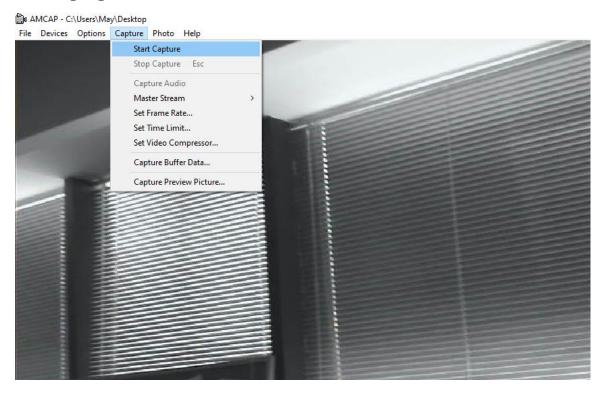


### 7. Camera Parameters Interface

### - Video Proc Amp

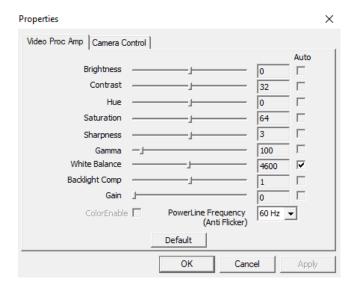



### - Camera Control

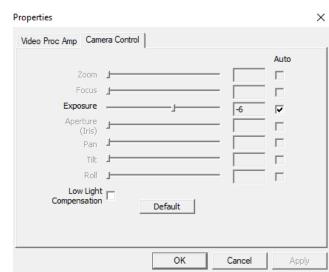

Website: <a href="mailto:www.arducam.com">www.arducam.com</a> | Email: support@arducam.com

### - Video Capture Pin

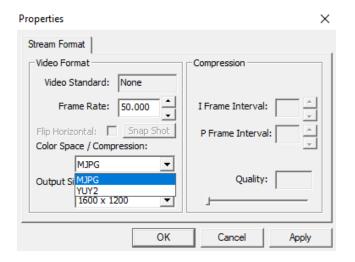

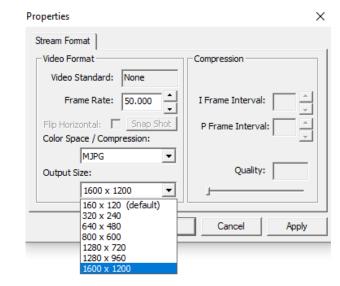

# 8. Function Inspection Criteria

### 8.1 Function definition:

Camera module electrical performance and image quality.

### 8.2 Inspection methods

- Staff: Visual inspection personnel need to be trained and have normal color recognition ability. Their vision should be above 1.0 (or more than 1.0 after correction is acceptable), and their color discrimination ability can pass standard tests.
- Tool: Connect the computer, inspect images with Amcap software.
- Distance and Time

Observation distance: 30~55cm

Observation time for each surface: 3~5seconds

• Inspection condition: Visual inspection should be performed under unobtrusive fluorescent lamps, and its minimum illumination should be above 100 feet of candlelight, or 60W fluorescent lamps, inspected at 1.5m distance.

### 8.3 Accept criteria

- The image has no mess, color screen and discoloration.
- There is no white spot, black spot, dirt or dark angle in the image.
- The image is same clear on all corners

# 9. Visual Inspection Criteria

### 9.1 The definition of the appearance

Camera module appearance.

### 9.2 Test methods

• Staff: Visual inspection personnel need to be trained and have normal color recognition ability. Their vision should be above 1.0 (or more than 1.0 after correction is acceptable), and their color discrimination ability can pass standard tests.

Distance and Time

Observation distance: 50~75cm,

Observation time for each surface: 3~5seconds

- Inspection condition: Visual inspection should be performed under unobtrusive fluorescent lamps, and its minimum illumination should be above 100 feet of candlelight, or 60W fluorescent lamps, inspected at 1.5m distance.
- Observation angle: Observation angle between  $40^{\circ} \sim 50^{\circ}$ .

### 9.3 Accept criteria

- Cleanliness: Parts must be free of stains, dust, grease, and other stains. Smudges due to transportation materials are acceptable if they can be blown away or wiped off.
- Assembly surface: The parts to be assembled should avoid scratches, gouges, dents, bends, cracks, indentations, abrasions or other defects caused by improper assembly.

# 10. Reliability Test

Items	Condition	Specification	
High Tomponature Test	Temp.: 80°C	No abnormal	
High Temperature Test	Time: 96H		
Low Temperature Test	Temp: -20°C	No abnormal	
Low Temperature Test	Time: 96H	No adilorillar	
II 114 TI4	Temp: 60°C	NI. dan mari	
Humidity Test	Humidity: 80-85%	No abnormal	
	Time: 24H		
Cable Tensile Strength Test	Loading weight: 4KG	No abnormal	
	Time: 60s		
Duan Toot	Hight: 60CM	Electric normal	
Drop Test	Number of times: 10		

Website: www.arducam.com | Email: support@arducam.com

	On the wood		
Vibration Test	Vibration machine vibration frequency to 50Hz	Electric normal	
vibration Test	Vibration amplitude:	Electric normal	
	1.5MM;		
USB Connector	Vibration time: 30 Minutes	Electric normal	
USB Connector	Number of times: 250	Electric normal	

# 11. Packing Request

- Products should be strictly based on product characteristics to develop corresponding packaging standards and follow the implementation to ensure that the product is used within the specified use and storage period, to achieve anti-static, moisture-proof, shock-proof, mildew-proof, anti-barbaric handling and other signs and related warranty requirements. Product packaging should be marked: Supply-side name / logo, Product Model specifications, containing the number, production date / batch number and order number.
- The product's outer packaging should be marked with: supplier name / sign, product model specification, built-in quantity, production date / batch number and order number.
- The packing and packing scheme are based on the customer's requirements, and the two parties will negotiate the specific details. The sealed samples shall prevail.

### 12. Others

- Changes to this acknowledgement need to be confirmed by both parties, and any modification by either party is invalid.
- This acknowledgment must be signed and returned within seven working days of receipt by the client, late regarded as the default.

Website: www.arducam.com | Email: support@arducam.com